

## Tensioning the Clipper Blades

Your Wolseley clipper will arrive with the clipper blades on. To tension them correctly:

- Turn on the clipper.
- Adjust the tension by turning the tension nut clockwise until you feel it start to tighten (see fig.1). **You will hear the motor begin to strain.**
- Loosen the blades by turning the tension nut anti-clockwise (approximately  $\frac{1}{2}$  turn) until you feel the blades loosen (see fig.2). **You will hear the motor begin to run freely.**
- Use the marker on the tension nut for a guide.
- You are now ready to clip.
- You may need to adjust the tensioning whilst clipping if the blades become worn or if you are clipping a thick or dirty coat. Do this by turning the tension nut anti-clockwise  $\frac{1}{4}$  turn each time until the blades start to clip properly again.
- It is important to correctly tension your clipper blades. If they are too loose they will not clip properly or they will clog. If they are too tight the blades will become blunt and may cause overheating.
- **Please note as a general rule the least tension you can use to clip the better.**

fig.1

turn  
tension  
nut  
clockwise  
until tight

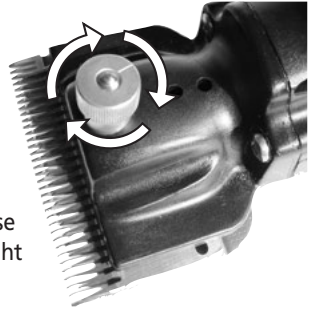


fig.2

turn the  
tension nut  
anti-clockwise  
until it loosens  
(approx  $\frac{1}{2}$  turn)

